



# Pressure Level Transmitter









































### PRODUCT INTRODUCTION

#### **FEATURES**

- 1. FineTek Models include: extension cable transducer, Anti-corrosive model, flanged models & pressure
- 2. Can be connected to digital panel meters, recorders, PLC, signal controllers.
- 3. The metal diaphragm is suitable in as weak acid and alkaline liquids or sewage water treatment.
- 4. Our internal temperature compensation ensures long lasting reliability.
- 5. Customized flange/screw sizes available.



A pressure sensor is made up of a piezoresistor Wheatstone bridge.

As shown in fig.2, the pressure is applied to the diaphragm and passes through the silicon oil onto the Wheatstone bridge.


When the liquid pressure acts directly on the front face of diaphragm, the Wheatstone bridge will creates a differential voltage. This voltage difference will then be amplified to obtain a current signal of 4-20mA. When this current output is connected to an analog meter, we can scale properly to read the level of the applied liquid in a container or a vessel.

The formula used here is:  $P = \theta \times H$ 

Where P is pressure,  $\theta$  is pressure constant and H is the level of liquid in a container.

#### **APPLICATIONS**

- 1. EC1100 is a liquid measurement device which can be used in a variety of environments, including wateragitation environments.
- 2. EC1200 can withstand high temperature liquid envi-
- 3. The Standard Flange Type, EC1210 can be used in liquid & gas pressure measurement environments (i.e., mildly corrosive environments).
- 4. EC1300~1320 type is suitable for measurement of very deep water, such as measurement of reservoirs.
- 5. EC1500 is suitable for pressure measurement or control devices such as those found in hydraulic and pneumatic machines.

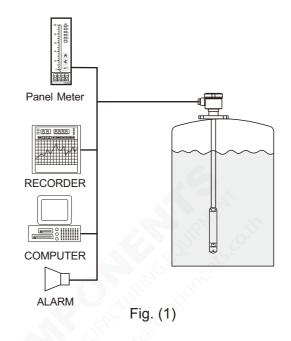


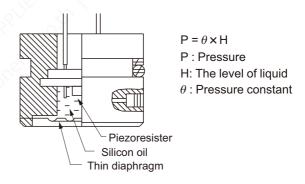


Fig. (2)



### **SPECIFICATIONS**

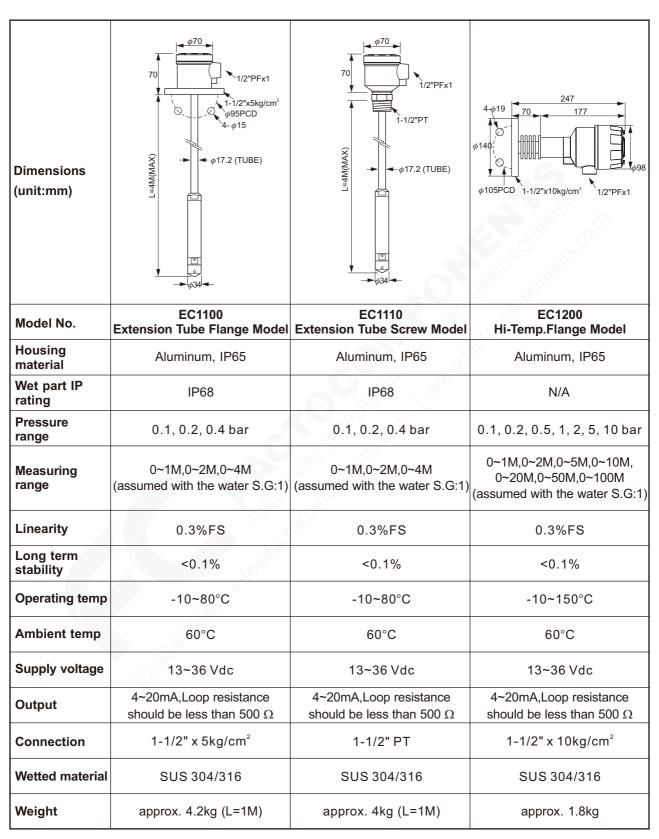

<sup>Special size flange and screws are available.</sup> 

**<sup>%</sup>OEM/ODM** is welcome.











Dimensions (unit:mm)	115 4- φ15 45 70 φ70 PCD φ95 1-1/2"x5kg/cm² 1/2"PFx1	φ70  1/2"PFx1  1-1/2"x5kg/cm² φ95PCD  4-φ15  φ8 (Cable PVC)	φ70  1/2"PFx1  1-1/2"PT  φ8 (Cable PVC)	
Model No.	EC1210 Flange Standard Model	EC1300 Extension Cable Flange Model	EC1310 Extension Cable Screw Model	
Housing material	Aluminum, IP65	Aluminum, IP65	Aluminum, IP65	
Wet part IP rating	N/A	IP68	IP68	
Pressure range	0.1, 0.2, 0.4 bar	0.1, 0.2, 0.5, 1, 2, 5, 10 Bar	0.1, 0.2, 0.4, 1, 2, 5, 10 Bar	
Measuring range	0~1M,0~2M,0~4M (assumed with the water S.G:1)	0~1M,0~2M,0~5M,0~10M, 0~20M,0~50M,0~100M (assumed with the water S.G:1)	0~1M,0~2M,0~4M,0~10M, 0~20M,0~50M,0~100M (assumed with the water S.G:1)	
Linearity	0.3%FS	0.3%FS	0.3%FS	
Long term stability	<0.1%	<0.1%	<0.1%	
Operating temp	-10~80°C	-10~80°C	-10~80°C	
Ambient temp	60°C	60°C	60°C	
Supply voltage	13~36 Vdc	13~36 Vdc	13~36 Vdc	
Output	4~20mA,Loop resistance should be less than 500 $\Omega$	4~20mA,Loop resistance should be less than 500 $\Omega$	4~20mA,Loop resistance should be less than 500 $\Omega$	
Connection	1-1/2" x 5kg/cm <sup>2</sup>	1-1/2"x5kg/cm²	1-1/2"PT	
Wetted material	SUS 304/316	SUS 304/316	SUS 304/316	
Weight	approx. 1.5kg	approx. 2.8kg (L=1M)	approx. 2.9kg (L=1M)	

<sup>\*</sup>Special size flange and screws are available.

<sup>%</sup>OEM/ODM is welcome.











Dimensions (unit:mm)	φ8 (Cable PVC)	18 11 58 27 34 50 1/2"PT 10.5		
Model No.	EC1320 Extension Cable Model	EC1500 Pressure Transducer		
Pressure range	0.1,0.2,0.5,1,2,5,10 bar	0.1,0.2,0.5,1,2,5,10,20,50,100 bar		
Wet part IP rating	IP68	N/A		
Measuring range	0~1M,0~2M,0~5M,0~10M, 0~20M,0~50M,0~100M (assumed with the water S.G:1)	N SOLETIE		
Linearity	0.3%FS	0.3%FS		
Long term stability	<0.1%	<0.1%		
Operating temp	-10~80°C	-10~80°C		
Ambient temp	N. A.	60°C		
Supply voltage	13~36 Vdc	13~36 Vdc		
Output	4~20mA,Loop resistance should be less than 500 $\Omega$	4~20mA,Loop resistance should be less than 500 $\Omega$		
Protection		1/2" PT		
Wetted material	SUS 304/316	SUS 304/316		
Weight	approx. 0.8kg (L=1M)	approx. 250g		

 $<sup>\</sup>Re$ Special size flange and screws are available.




 $<sup>\</sup>Re OEM/ODM$  is welcome.




# **INTERNAL WIRING**

- 1. Ensure power is turned off before connecting. See fig.3 (depending on the model).
- 2. Make sure the outlet breather capillary is open for air to flow freely.
- 3. Please tighten the cover and cable gland after the wiring is finished.
- 4. The cable should be at least 18 AWG or 16 AWG.

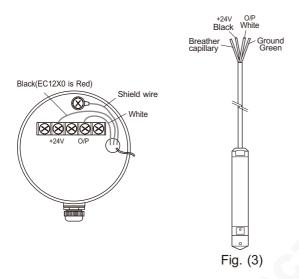


#### EC1500 TYPE

1. Remove the cover of plug and connect cable to the terminal of plug.

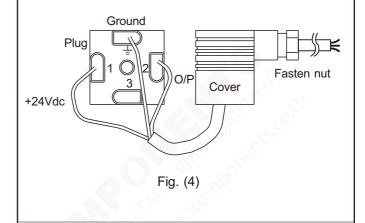

2. When wiring is finished, assemble the plug with cover.

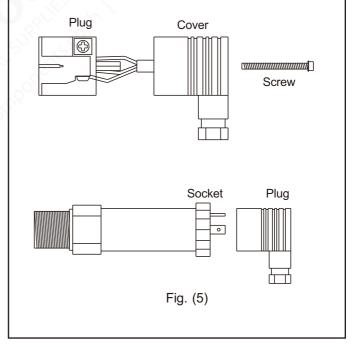







## **EXTERNAL WIRING**

- 1. When connecting panel meters, please refer to the wiring diagram attached and the related operation manual.
- 2. Wiring connection should be kept away from high voltage cables, (e.g. power cables) to prevent electrical interference.
- 3. Operating voltage should be kept higher than 13Vdc.
- 4. Wiring should be used in shielded insulated cable.
- 5. Provide additional power supply if required (Diagram 7). If installing 2 panel meters at different location, please refer to diagram 8.

EC1100~1110,1200~1210, 1300~1310 Inside view

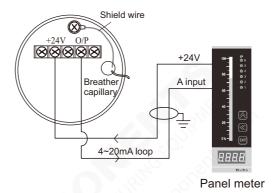


Fig. (6)

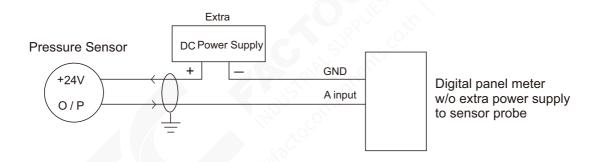


Fig. (7)


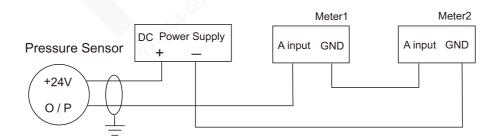


Fig. (8)



# **ADJUSTMENT (FOR ZERO-SPAN)**

- Since Zero & Span adjustment have been made in the factory. Don't change the setting unless necessary. Zero represents the 4mA for an empty tank and Span represents the 20mA for a full tank.
- Adjustment range: (SPAN) 18~24mA, (ZERO) 3~5mA.
- In the case where sensor output requires more than the 4~20mA signal, a panel meter with programmable input (0~25.5mA) can be used.

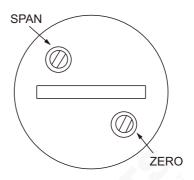

The electrical housing for pressure transducer.

#### **Pressure Unit Conversion Constants**

			2 0			
	PSI	КРа	mbar	cmH₂O	mmHg	kgf/cm²
PSI	1	6.89	68.95	70.31	51.71	70.31x10 <sup>-3</sup>
KPa	0.15	1	10	10.2	7.5	1.02x10 <sup>-2</sup>
mbar	1.45x10 <sup>-2</sup>	0.1	1	1.02	0.75	1.02x10 <sup>-3</sup>
cmH₂O	14.22x10 <sup>-3</sup>	98.07x10 <sup>-3</sup>	0.98	1	0.74	10 <sup>-3</sup>
mmHg	19.34x10 <sup>-3</sup>	13.33x10 <sup>-2</sup>	1.33	1.36	1	1.36x10 <sup>-3</sup>
kgf/cm²	14.22	98.07	980.67	1000	735.56	1

1 MPa=10.2kgf/cm<sup>2</sup>=145 PSI

1 kgf/cm<sup>2</sup>=0.098MPa=14.22 PSI









#### **INSTALLATION**

- 1. Note the installation diagrams to the right and select your model accordingly.
- 2. The flange type transducer is equipped with a side mounted electrical housing.
- 3. The models EC1100 to EC1310 series have 3 multithread copper wires and a breather capillary. Avoid bending cables to ensure maximum accuracy.
- 4. Do not use liquid that can crystallize or solidify in the pressure transducers and sensors.
- 5. The tank or vessel should not be vacuum or no pressure state.
- 6. Handle the sensor probes with care. The sensor probe is delicate and vibration or shock can damage it.
- 7. Do not use high pressure water jets to wash or contact the sensing diaphragms.

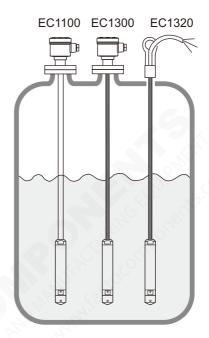

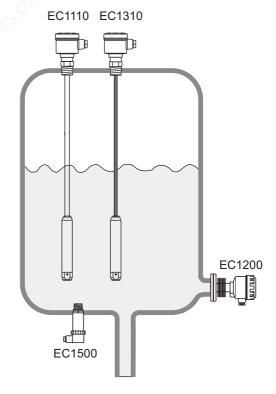








# MODEL NUMBER/ORDER CODE COMPARISON TABLE

Model Number	Order Code
EC1100EM	ECX1E0000-AAKB140
EC1110EQ	ECX1E0000-AAKB101
EC1200EN	ECX1E200-FAKB142
EC1210EM	ECX1E000-BAKB140
EC1300EM	ECX1E000-CAKB140
EC1310EQ	ECX1E000-CAAB101
EC1320	ECX1E100-C000000
EC1500BU	ECX1E000-DACA507
EC1500BQ	ECX1E000-EAAA501






# **ORDER INFORMATION**

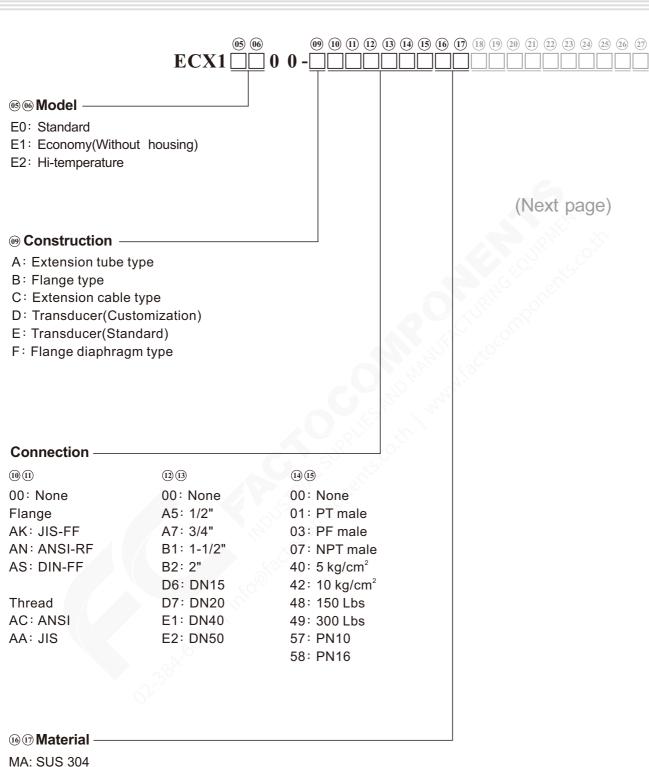

MB: SUS 316 MC: SUS 316L 21: PTFE coating

10



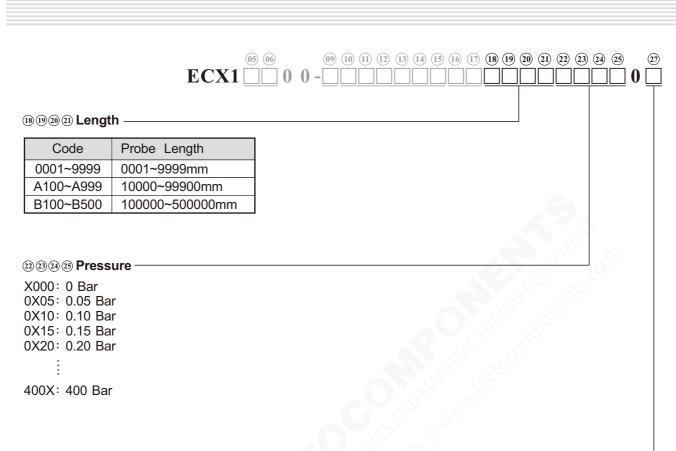

#### 27 Housing -

Code	Description	
0	None	
Н	H type housing(AL)	
J	J type housing(AL)	
K	K type housing(AL)	
L	L type housing(AL)	
М	M type housing(SUS)	
N	N type housing(SUS)	
Х	X type housing(AL)	

